

Series 150 Motogard Installation Instructions

CONNECTIONS

Power Connections:

Connect 120/240 VAC to input terminals 1 and 2.


Sensor Connections:

- 1. Connect one lead of each thermistor to Terminal 3.
- 2. Connect other lead of each Thermistors **in series** through to Terminal 4.
- 3. Maximum number of Thermistors in **series**: Three (3)

Output Load Connections:

- 1. Terminals 5, 6 and 7 comprise a set of "form C" contacts with terminal 6 common. Terminal 5 is the open side. Terminal 7 is the closed side.
- 2. Be sure power is never applied directly across contacts but always in series with a load.
- 3. Maximum allowable load **5 amps at 115 VAC**
- 4. The closed output of the Motogard Over Temperature Protection System has been specifically designed to operate directly in series with most main line contactors. If a small interposing relay must be used, the sealed burden should be greater than 10VA.
- 5. The open output of the Series "150" controller can be used for trip indication.

See opposite side for possible wiring option.

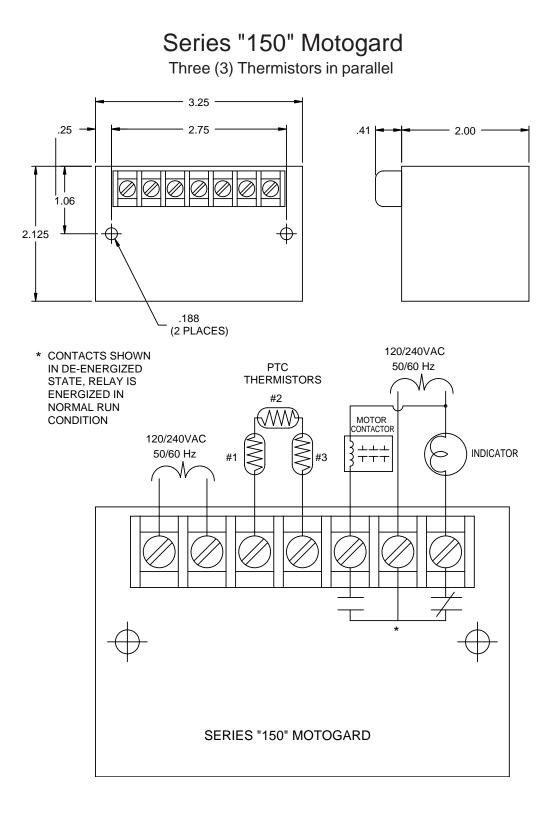



1080 N. Crooks Road • Clawson, MI 48017 800-635-0289 • 248-435-0700 • Fax 248-435-8120 www.ametekapt.com • www.ametek.com

